



Supplement to instruction book

Seat belts

Vehicles intended for the North American market are fitted with seat belts of the type shown in the pictures adjacent.

When about to be used, remove the belt from the retaining device on the door pillar and place one band round the waist and the other over the shoulder and across the chest and then lock the belt in the anchorage between the front seats. The length of the belts can be adjusted at the outer, lower attachment.

The belt is released by pressing in the trigger and lifting up the hook. When not in use, the belt should always be hung up on the hook on the door pillar.



VOLVO
30767



VOLVO
51002