

The Instruction Book for the ordinary P 120 largely applies to the 122 S Station Wagon.

This booklet therefore deals only with the most essential differences, for example, folding up and down the rear seat, rear doors, etc.

Description, driving and maintenance

General

The Volvo 122 S Station Wagon is a four-door car, the space behind the front seats being easily transformed to a large luggage compartment. The luggage compartment is directly accessible from inside and outside through the rear side doors and through two rear end doors which can be hinged upwards and downwards respectively from outside.



Type designation	Engine	Transmission	Rear axle
Volvo P 22244 VD or HD	B 18 D	M 40	4.56:1

The three-passenger rear seat can be folded down into the floor when a large luggage space is required.

The car is provided with reversing lights which come on automatically when reverse is engaged.

The tire size is 6.40—15", rim size 4.50×15".

Driving


Recommended speeds for the different gears:

Gear		1	2	3	4
Speed	km.p.h.	0—40	15—65	25—95	35—
	m.p.h.	0—25	10—40	15—60	20—

Lighting

The lamp for interior lighting is placed in the middle of the roof behind the driver.


The reversing lights, which come on automatically when reverse is engaged, produce white light through the lower, plain part of the rear lamps. The red part in the middle of the rear lamp consists of the parking and stop light and the upper amber part, the flasher.

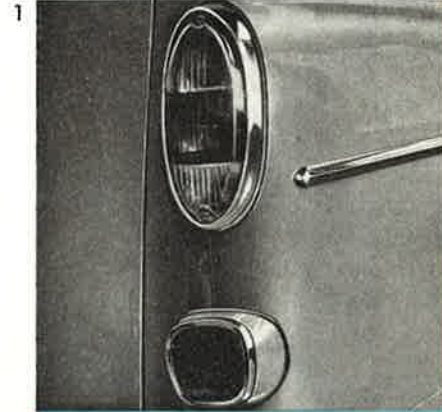

Replacing rear lamps bulbs


When replacing the bulbs in the rear lamp the screws for the glass, one at the top and the other at the bottom, are unscrewed after which the glass is lifted off. Press in the faulty bulb lightly, turn it to the left and remove it. Fit a new bulb in the same way. Make sure that the gasket lies properly on the glass and screw back the glass into position. The plain part of the glass should face downwards.

The upper bulb is intended for the flasher, the centre for the parking light and stop light and the lower for the reversing light.

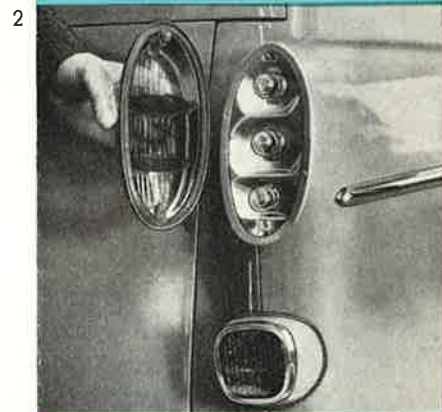

Replacing bulbs for number plate lighting

If either of the bulbs for the number plate lighting need replacing, the number plate carrier is hinged upwards, after which the yoke which holds the bulb is moved to one side. The bulb holder can then be removed and the bulb replaced. When re-fitting, make sure that the gasket comes correctly, and hinge down the plate.

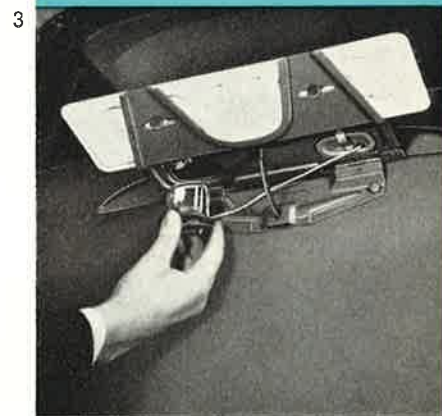

Body

Rear seat

When extra large baggage space is required, the rear seat can be folded down.

1. Lift up and pull the seat cushion forwards with the help of the loop on its rear edge.
2. Turn the handle on the rear of the seatback a quarter of a turn so that the catch releases. Hinge the seatback forwards and downwards and press it right down so that the catch engages the support as shown in Fig. 5.
3. When hinging the rear seat up, the handle on the seatback is first turned a quarter of a turn, after which the support and seat cushion are hinged up. Make sure that the seatback is pressed sufficiently far backwards so that the catch device locks it in the hinged-up position.



Luggage compartment

The luggage compartment is directly accessible from inside and also from outside after the rear end doors or rear side doors have been opened.

The rear end doors are opened from outside by turning the rear handle. They can also be opened from inside after pressing in the button on the lock.

The upper door is first lifted up fully and then released, after which the catch on the side grips and holds the door in the fully open position.

The lower door is hinged backwards while holding the handle in the turned position.



When closing, the lower door is moved up first.

When closing the upper door, it should first be lifted upwards slightly so that the catch releases, and then hinged downwards and pressed into the locked position.


NOTE. If it is necessary to drive with the lower door open, the rear number plate should be hinged down so that the car number is visible. See Fig. 8. Do not forget to fold the number plate back again when the door is closed.

Spare wheel, jack and tools

The spare wheel, jack and tools are placed in a recess under the luggage compartment floor.

They are accessible after the mat has been rolled back and the cover hinged up.

1. Pull up the rear edge of the mat on the luggage compartment floor and roll it forwards.
2. Lift both the catches and hinge up the cover.

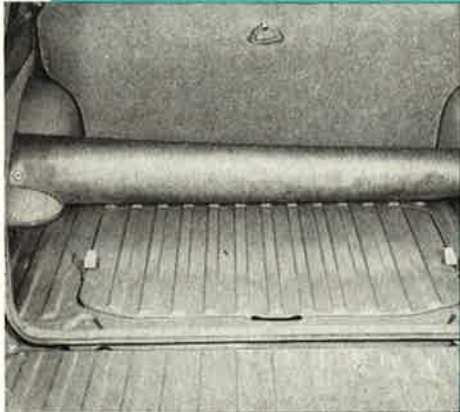

3. The spare wheel is removed by unscrewing the wing nut in the middle a few turns, after which both the nut and bolt can be removed and the wheel lifted up.
4. Clean the wheel which is to be placed in, put it in position and insert the bolt so that its hook engages the attachments on the bottom plate. Then tighten the wing nut.
5. Hinge down the cover and lock it with the catches, roll back the mat and fasten it to the press buttons and at the rear edge where it is secured by the teale strip.
6. The spare wheel can also be stowed vertically against the left wall where there is a hole for the securing bolt of the wheel, see Fig. 13.



Fuel tank

The tank is located at the rear under the floor with the filling hole on the left side.

The cap is removed by turning to the left.

